


Replacing the image drum in your OKI C650 Printer



1. Pull the tab down to open the printer. To access the image drum, pull out the tab labelled L1 (circled).



2. Pull out the tab L2, then lift to lift the lid of the printer. Now pull out the image drum drawer.

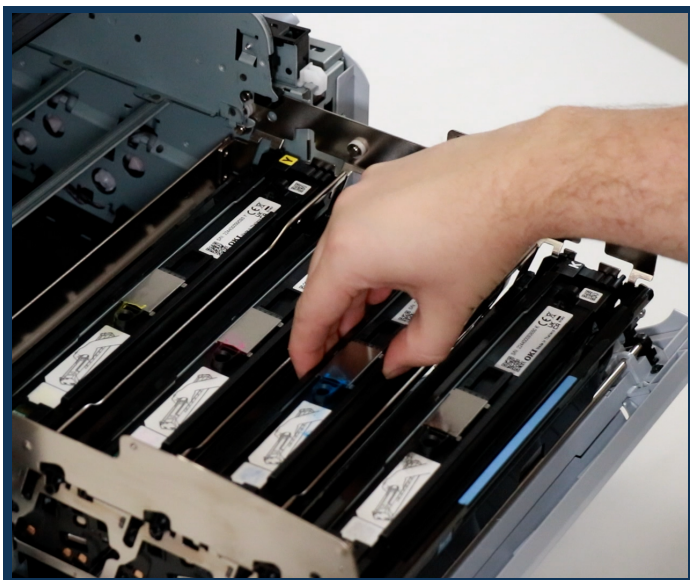

3. Lift out the corresponding image drum out of the drawer and replace with a new one. Then, push the drawer back in until it clicks into place, lift the lid down and ensure L2 and L1 are pushed back in. You can begin printing again.

If you would like any support, please contact our technical support team:

email: support@jepsonandco.com / tel: 0114 273 1151