


Changing the ribbon on your Merlin Scion Printer

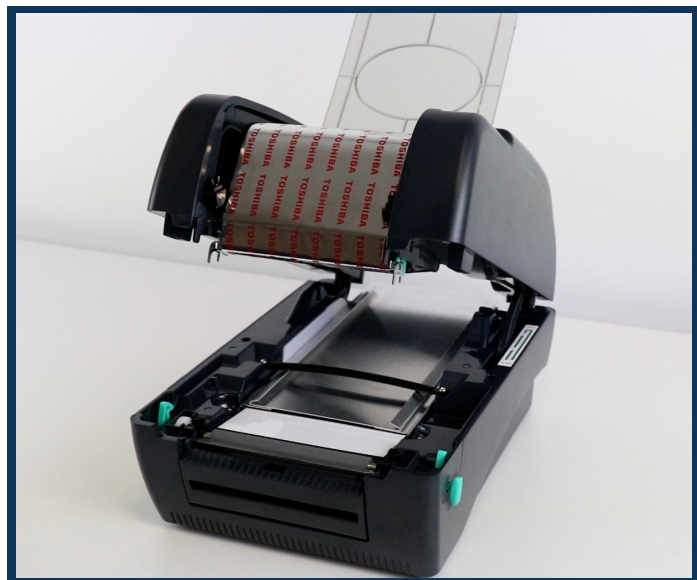

1. The silver foil indicates the end of the ribbon. Open the printer lid and remove the ribbon by pushing to the left and lifting up.



2. Remove the black plastic core from the waste roll and reinsert into the new ribbon. Move the empty cardboard core to the front.



3. Insert the new ribbon to the back ribbon slot and ensure the loose roll is face down.

Feed the ribbon under the main printer carriage and stick down to the front cardboard core.

Reinsert the ribbon, then roll this to ensure it runs tight and lower the printer lid.

If you would like further support, please contact our technical support team on:

email: support@jepsonandco.com
tel: 0114 273 1151



JEPSON & CO LTD
FIRST IN NUMBER PLATES
Celebrating 130 years