


Changing the printhead on your Merlin 240 Printer



1. Open the printer lid and push the clip down on the right side of the printer. Remove the waste ribbon by sliding it to the right.



2. Slide the bracket to the right where the printhead is and gently pull it away. Carefully unplug the three cables.

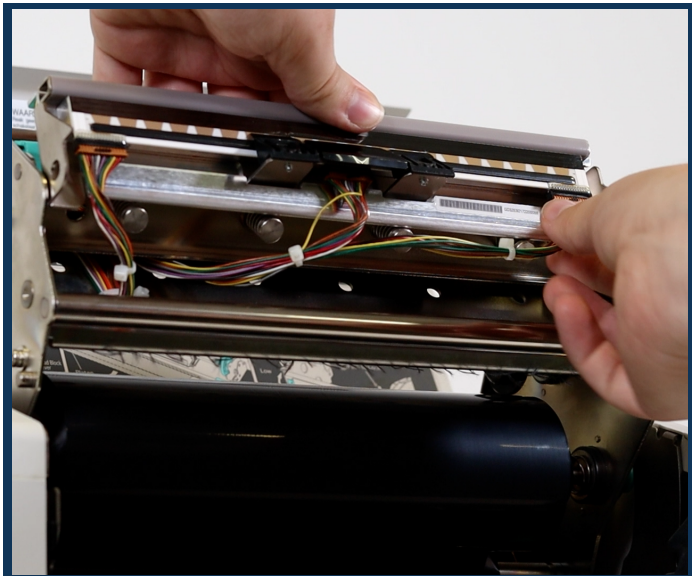

3. Take the new printhead and plug in the three cables. Reinsert the printhead back into place, sliding in from right to left.

Then, reinsert the ribbon and roll the ribbon tight. Lower the printer lid and you can begin printing again.

Please ensure you turn off the printer for the printhead change.

If you would like further support, please contact our technical support team on:

email: support@jepsonandco.com
tel: 0114 273 1151