




Changing the ribbon on your Godex ZX420 Printer

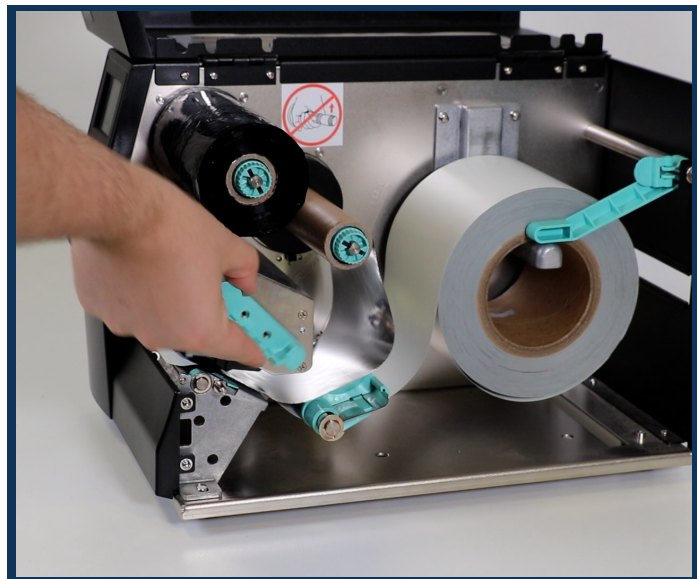

1. The silver foil indicates the end of the ribbon. Open the printer lid and push up the green lever to lift the printhead.

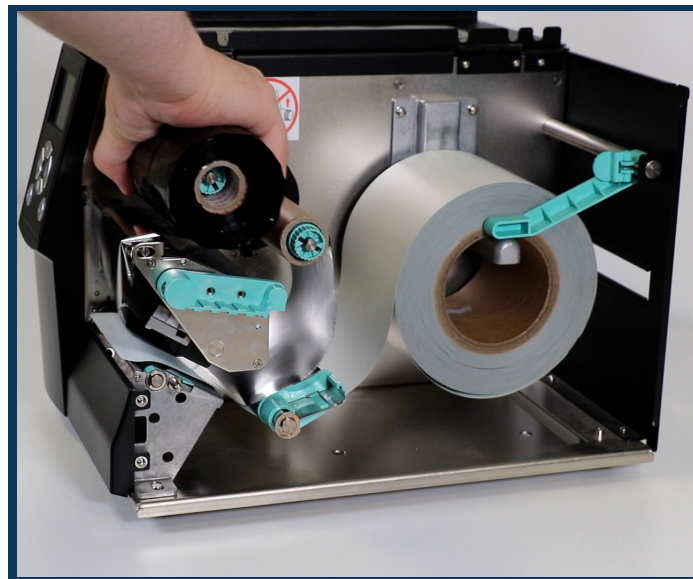

2. Slide the waste ribbon off and pull free from the cardboard core. Move the cardboard core to the front ribbon slot.

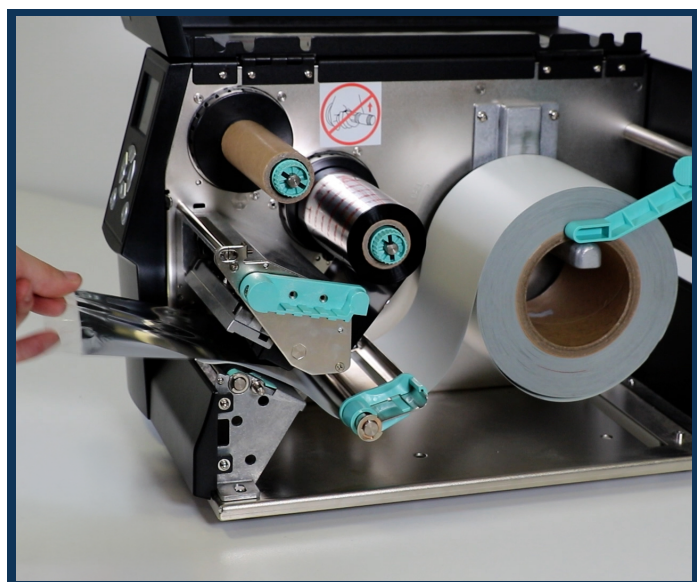

3. Insert the new ribbon to the back slot and feed the ribbon under the printhead as shown.

Stick the end of the ribbon down to the front cardboard core.

Ensure the ribbon runs tight and pull down the green lever to push the printhead down. Lower the printer lid and you can begin printing again.

If you would like further support, please contact our technical support team on:

email: support@jepsonandco.com

tel: 0114 273 1151



JEPSON & CO LTD
FIRST IN NUMBER PLATES
Celebrating 150 years