


Changing the ribbon on your Godex G500 Printer

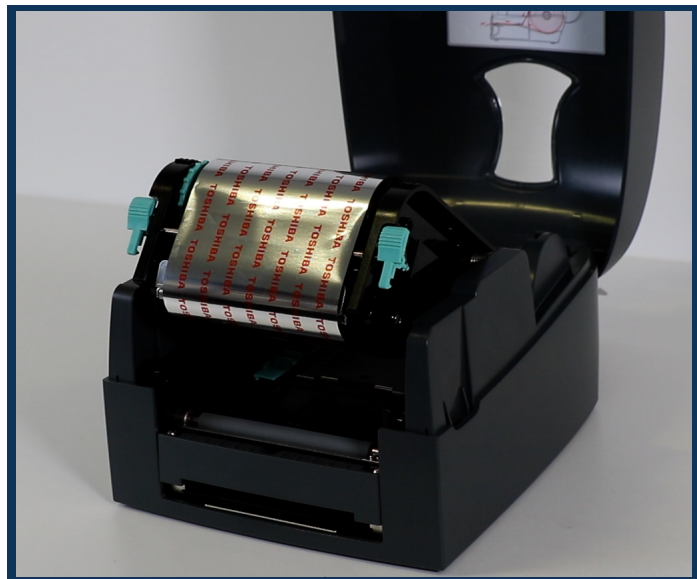

1. The silver foil indicates the end of the ribbon. Open the printer lid and push the green clips to lift the ribbon carriage. Remove the waste ribbon on top by sliding to the left.



2. Remove the black plastic core from the waste roll and reinsert into the new ribbon. Move the empty cardboard core to the top.



Feed the ribbon under the carriage and stick down to the front cardboard core.

Then, roll the ribbon to ensure it runs tight and lower the printer lid.

If you would like further support, please contact our technical support team on:

3. Insert the new ribbon to the back slot and ensure the loose roll is face down.

email: support@jepsonandco.com
tel: 0114 273 1151



JEPSON & CO LTD
FIRST IN NUMBER PLATES
Celebrating 150 years