

# Replacing the toner/image drum on your OKI B412 or B432 Printer



1. Turn off the printer and lift the lid by pressing the button as shown.



2. To replace the toner, pull the lever towards you, on the toner, and lift from the right side. Replace with the new toner.



3. To replace the image drum, lift the image drum out as shown and replace with a new image drum by slowly dropping it in. Then replace the toner with an old or new one, which can be found in the 'replace toner' guide.

If you would like any support, please contact our technical support team:

email: [support@jepsonandco.com](mailto:support@jepsonandco.com) / tel: 0114 273 1151