

# Replacing the toner in your OKI C650 Printer



1. Lower the printer lid by pulling the blue tab on the right hand side.



2. Pull the handle at the bottom of the toner you would like to replace. Pull the toner out and replace with the new one by slotting it in. Push the printer lid back - you can now begin printing again!

If you would like further support, please contact our technical support team on:

email: [support@jepsonandco.com](mailto:support@jepsonandco.com)  
tel: 0114 273 1151